

2018+ JEEP JL / JT SIDE MARKER INSTALL GUIDE

WARNING: By reading this document, you agree it is only to be used as an educational guide. Morimoto Lighting nor its dealers make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. If you are unable to clearly understand and adapt the information below, professional installation is recommended.



PACKAGE CONTENTS



2X SIDEMARKER ASSEMBLIES

2X WIRE TAPS

IMPORTANT: If your vehicle is equipped with anything but OEM turn signals (full assemblies, LED bulbs, or otherwise) in the tail lights or elsewhere: You may experience a hyper flash and/or problem with the sequential signal setting on these headlights. This is not a defect in the headlight, and caused by un-matched impedance with your original vehicle settings.

REQUIRED TOOLS

- RATCHET
- 10MM SOCKET
- FLAT HEAD SCREWDRIVER OR TRIM REMOVAL TOOL
- WIRE CUTTERS
- PLIERS

INSTALLATION PROCESS


1. Starting under the driver side fender, remove these (2) two push clips.



2. Towards the back of the fender, remove this (1) one 10mm bolt, and (2) two push clips.




3. Pull the fender liner down and locate this connector toward the middle of the fender. Unplug it by sliding the red tab back, then press the release tab down, and slide the connector apart.

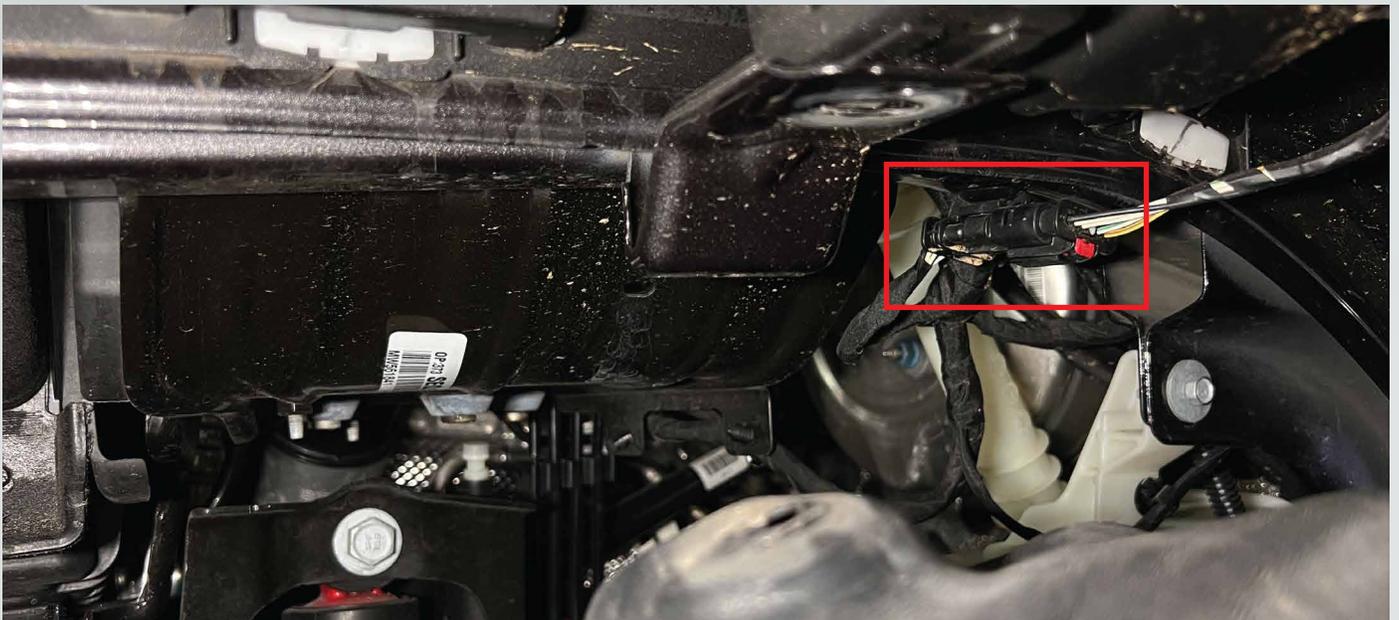



4. With a plastic pry tool, pry out the fender vent in the order shown below.




5. Grab the driver side Morimoto side marker and cut off the pre stripped wire ends.

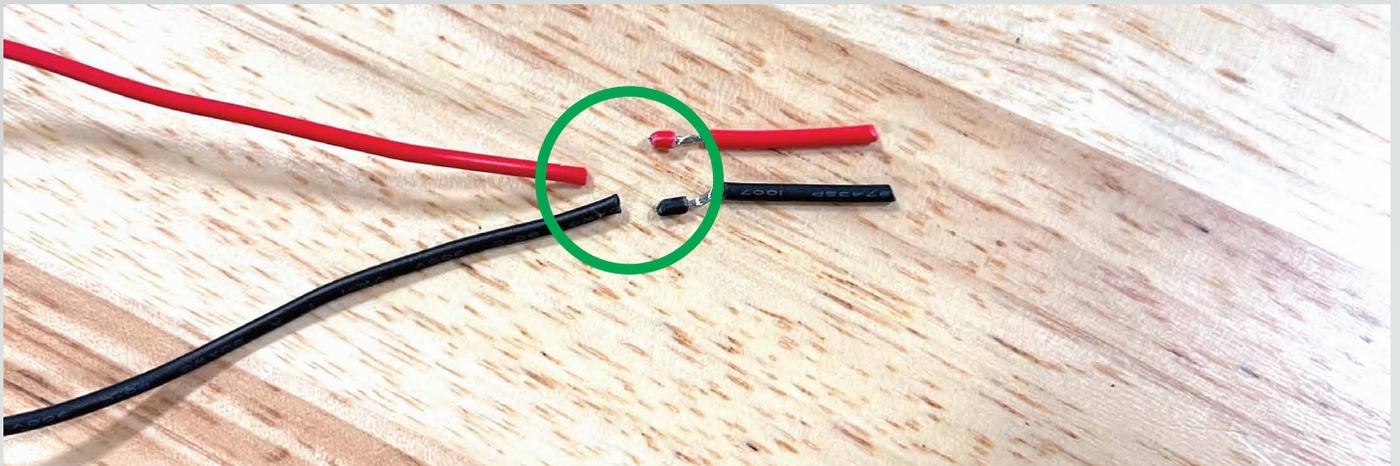

6. Get one of the included wire taps , insert the wire into the tap, and crimp down the cover with pliers until the cover locks into place. Repeat on the other wire.

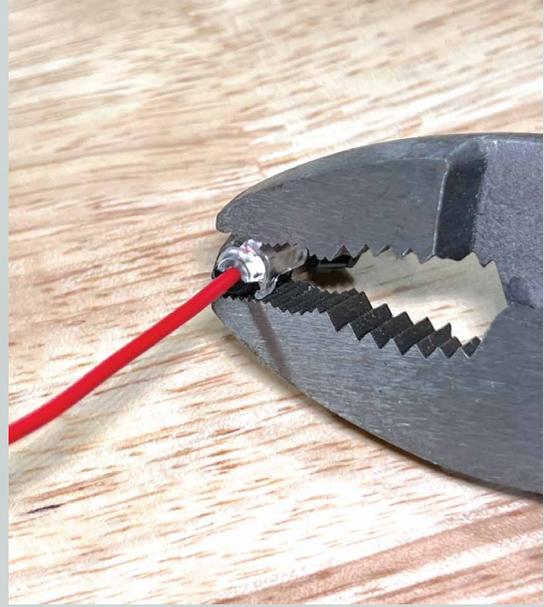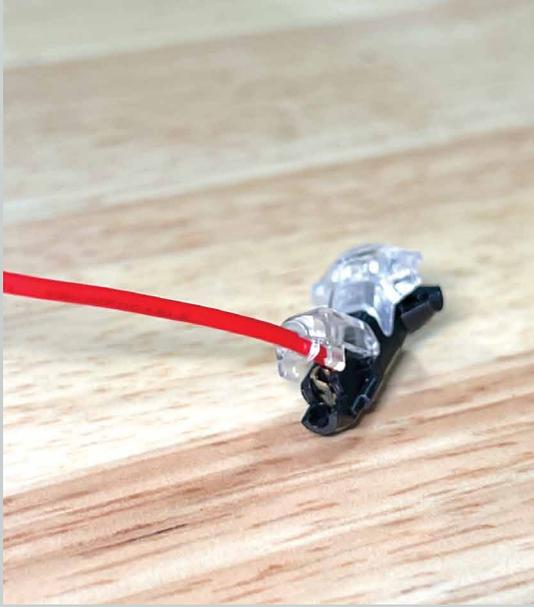

7. Take the Morimoto side marker and route the wiring through the hole in the fender up into the engine bay. From there route the wiring into the fender area.

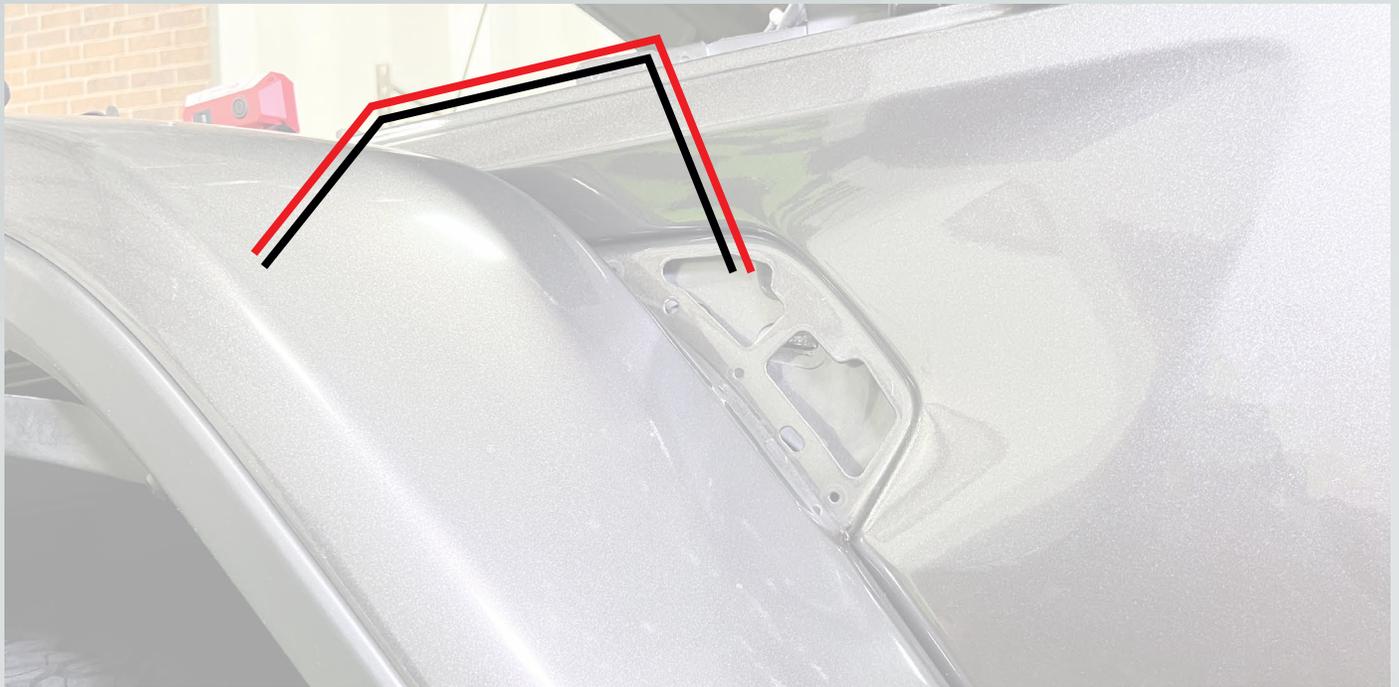


8. Clean the highlighted space with some isopropyl alcohol and a rag.



9. Pull back the backing off of the double sided tape. and install the side marker onto the fender.



10. With the wires in the fender area, connect the side marker wires with the wire taps to the fender wiring. To secure the taps to the wiring simply clamp down the caps with pliers until the caps lock.

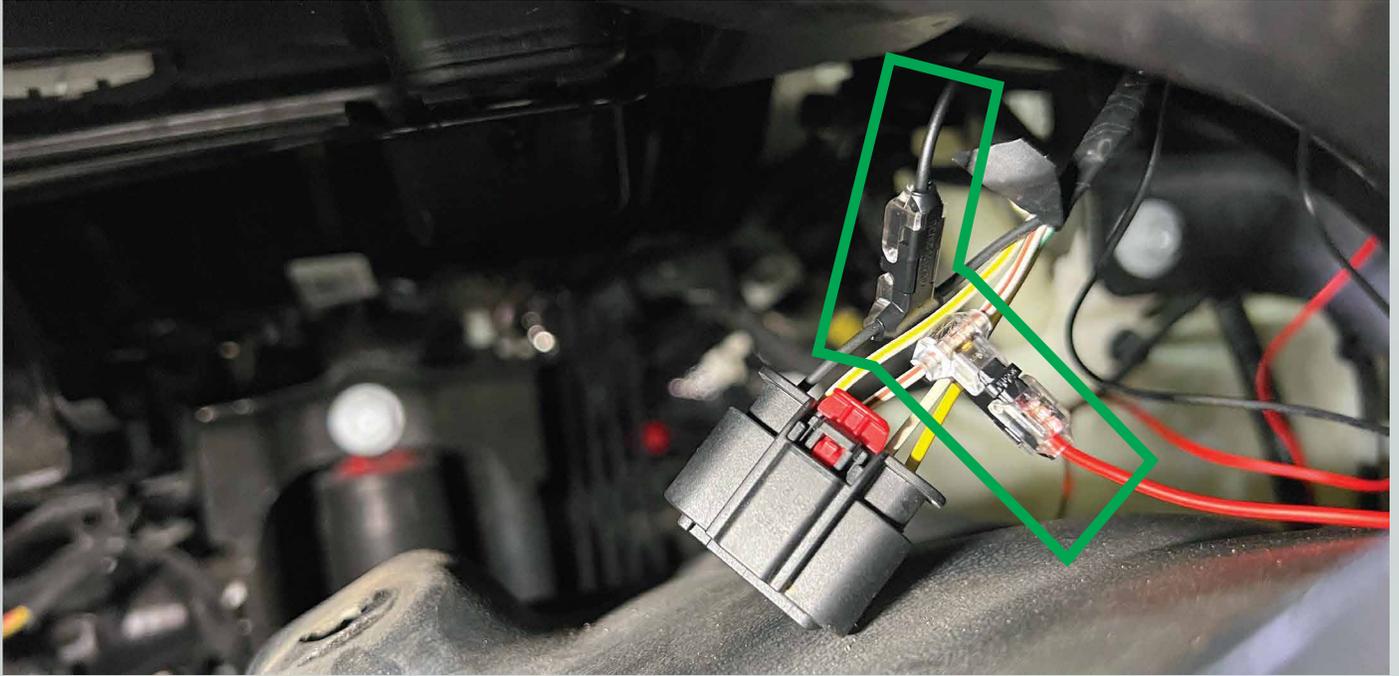

11. Plug the fender wiring back into the vehicle wiring and reassemble the fender liner in the reverse order that you took it apart.

12. Repeat steps #1-9 on the other side of the vehicle.

— ENJOY YOUR NEW MORIMOTO LIGHTS! —